

INSTRUCTION MANUAL

REPAIR PARTS LIST

**WARNING**

1. THIS IS A LIFTING DEVICE ONLY. LOAD MUST BE SUPPORTED BY OTHER APPROPRIATE MEANS BEFORE GETTING UNDER LOAD FOR ANY REASON.
2. DO NOT OVERLOAD. OVERLOADING CAN CAUSE DAMAGE TO OR FAILURE OF THE JACK.
3. THIS JACK IS DESIGNED FOR USE ONLY ON HARD LEVEL SURFACES CAPABLE OF SUSTAINING THE LOAD. USE ON OTHER THAN HARD LEVEL SURFACES CAN RESULT IN JACK INSTABILITY AND POSSIBLE LOSS OF LOAD.
4. FAILURE TO HEED THESE WARNINGS MAY RESULT IN LOSS OF LOAD, DAMAGE TO JACK AND/OR FAILURE RESULTING IN PERSONAL INJURY OR DAMAGE.
5. BEFORE RAISING ANY OBJECT, MAKE SURE THE JACK IS IN A STABLE POSITION. ALWAYS STABILIZE YOUR LOAD BEFORE LIFTING. WHEN RAISING OR LOWERING A LOAD, KEEP HANDS AWAY FROM THE MOVING PARTS IN THE JACK'S LIFTING MECHANISM.
6. ALWAYS KEEP A FIRM GRIP ON THE STEEL HANDLE OF THE JACK WHEN RAISING OR LOWERING A LOAD.
7. THE COMPLETE LIFTING NOSE OF THE JACK SHOULD BE PLACED UNDER THE OBJECT TO BE RAISED.
8. ALWAYS PLACE THE STEEL HANDLE IN AN UPRIGHT POSITION BEFORE MOVING THE REVERSING LATCH, [KEY 20], TO LOWERING POSITION. THIS WILL PREVENT THE STEEL HANDLE FROM MOVING UP AND DOWN RAPIDLY AND POSSIBLE INJURY TO THE OPERATOR.
9. NEVER WORK UNDER A RAISED LOAD UNLESS VEHICLE STANDS ARE USED UNDER THE RAISED LOAD. IF THE JACK REMAINS LOADED, ADDITIONAL PRECAUTIONS SHOULD BE TAKEN BY SLIPPING A BOLT THROUGH THE UPRIGHT STEEL STANDARD IMMEDIATELY BELOW THE LIFTING MECHANISM.
10. NEVER PUSH A LIFTED LOAD OFF THE JACK.
11. NEVER SERVICE THE JACK NOR ATTEMPT REPAIRS WHILE THE JACK IS UNDER LOAD.
12. NOTE: THE JACK MUST BE LOADED [100 POUNDS OR MORE] TO LOWER STEP-BY-STEP, OTHERWISE, THE LIFTING MECHANISM WILL AUTOMATICALLY DROP TO BASE LEVEL.
13. TO PROTECT THE LIFTING NOSE OF THE JACK FROM BREAKAGE, THE SHEAR PIN, [KEY 11], IS DESIGNED TO BREAK WHEN THE JACK IS OVERLOADED. THE LOAD WILL NOT FALL WHEN THE PIN SHEARS, HOWEVER, THE HANDLE WILL DESCEND RAPIDLY.

OWNER'S RESPONSIBILITY

Operation. The owner and/or operator shall have an understanding of these operating instructions and warnings before operating the jack. Warning information shall be emphasized and understood. If the user is not fluent in English, the instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

INSTRUCTIONS BEFORE USE

It is imperative in operating and handling your Jack that certain normal precautions be observed to prevent the possibility of injury or damage to you and your Jack.

LUBRICATION:

BEFORE USING YOUR JACK, LUBRICATE IT AT THE LUBE POINTS SHOWN IN THE DIAGRAM. Your Jack must have lubrication to function properly and give maximum lifting power.

Keep all working parts oiled and clean. Keep front and back edges of the Steel Standard lightly greased and free from rust.

Use any non-flammable cleaning solvent to clean parts, then apply light oil to all working parts.

OPERATION

To Raise A Load:

Place the Jack in position for use, making certain the base is on a firm, level surface and the upright Steel Standard is in a vertical position. Lift the Reversing

Latch, (Key 20), until it locks in the up position and raise the lifting mechanism until the lifting nose is completely and securely under the load. It is not necessary to jack up the lifting mechanism step-by-step to the point of lift. Grasp the steel handle firmly and pump it up and down. The load will be raised on each down stroke of the Steel Handle.

To Lower a Load:

Hold the steel handle in an upright position and move the Reversing Latch, (Key 20), to the down position. Grasp the steel handle firmly and pump it up and down and the load will be lowered on each up stroke of the steel handle.

Use as a Clamp, Winch, Hoist:


The Top Handle, (Key 2), can be turned 90 degrees to the upright Steel Standard and adjusted to any position on the Steel Standard for use as a clamp.

When the Top Handle is in a vertical position (in line with the Steel Standard), at the top of the Steel Standard, it forms a clevis for winching and hoisting.

STORAGE:

Before storing and after using, raise the Reversing Latch, (Key 20), until it locks in the up position. This will prevent damage to the Climbing Pins (Key 15) and the Cross Pins (Key 16).

When not in use, the working parts of the Jack should be protected from the weather, mud, sand, etc. Take care of your Jack and it will take care of you by giving many years of trouble-free service.

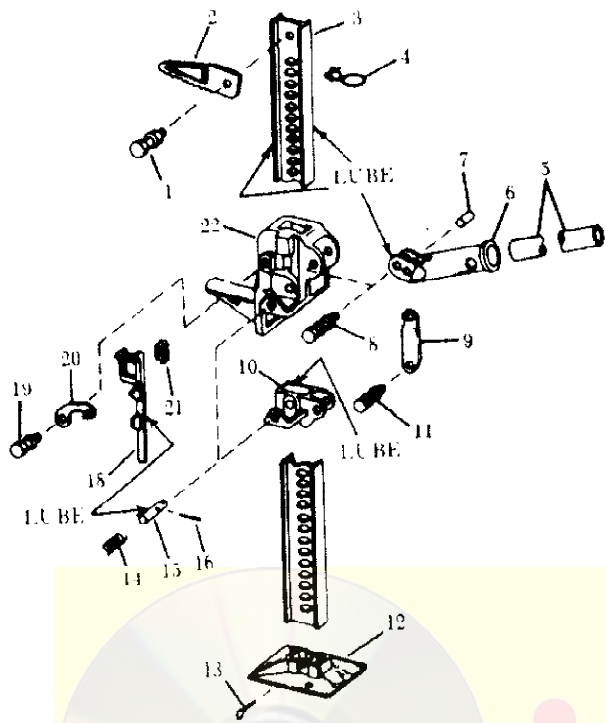

PARTS

| | | |
|----|-------|-------------------------------|
| 1 | 67000 | Handle Bolt |
| 2 | 67001 | Top Handle |
| 3 | 67002 | Steel Standard for 48" Model |
| 4 | 67003 | Handle Clip |
| 5 | 67005 | Steel Handle |
| 6 | 67004 | Handle Socket |
| 7 | 67006 | Pitman |
| 8 | 67007 | Hex Bolt (7/16 x 2 1/4) |
| 9 | 67009 | Pitman |
| 10 | 67010 | Small Runner |
| 11 | 67011 | Shear Pin Bolt (5/16 x 2 1/8) |
| 12 | 67012 | Base Plate |
| 13 | 67013 | Cotter Pin |
| 14 | 67014 | Climbing Pin Spring |
| 15 | 67015 | Climbing Pin |
| 16 | 67016 | Cross Pin |
| 18 | 67017 | Reversing Switch |
| 19 | 26527 | Bolt (5/16 x 1) |
| 20 | 67019 | Reversing Latch |
| 21 | 67020 | Reversing Switch Spring |
| 22 | 67021 | Large Runner |

Quick Parts

LIMITED WARRANTY

Lincoln, a Division of McNeil (Ohio) Corp., a subsidiary of Pentair, Inc., warrants that jacks and related service equipment sold with the brand-names Lincoln, Blackhawk Automotive, Blackhawk Automotive Banner, Blackhawk Automotive Porto-Power, Hein-Werner Automotive, Hein-Werner Automotive Winner will be free from defects in material and workmanship during the one (1) year following the date of purchase. This warranty is extended to the original retail purchaser only. If a jack or related service equipment proves to be defective during this warranty period, it will be repaired or replaced without charge. To obtain repair or replacement, it must be shipped, transportation charges prepaid, with proof of date of purchase to a Lincoln authorized Warranty and Service Center, within one (1) year following the date of purchase. This warranty does not apply to parts damaged from accident, overload, or abuse, nor does it apply to any equipment which has been altered or used with special attachments other than those recommended by Lincoln. No other express warranty applies to jacks and related service equipment manufactured by Lincoln. ANY IMPLIED WARRANTIES applicable to jacks and related service equipment manufactured by Lincoln, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WILL LAST ONLY FOR ONE (1) YEAR FROM THE DATE OF PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. In no event shall Lincoln be liable for incidental or consequential damages. The liability of Lincoln on any claim for loss or damage arising out of the sale, resale, or use of a jack or related service equipment shall in no event exceed the purchase price. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.