


Air Over Jack With Quick Springs AJ22FC

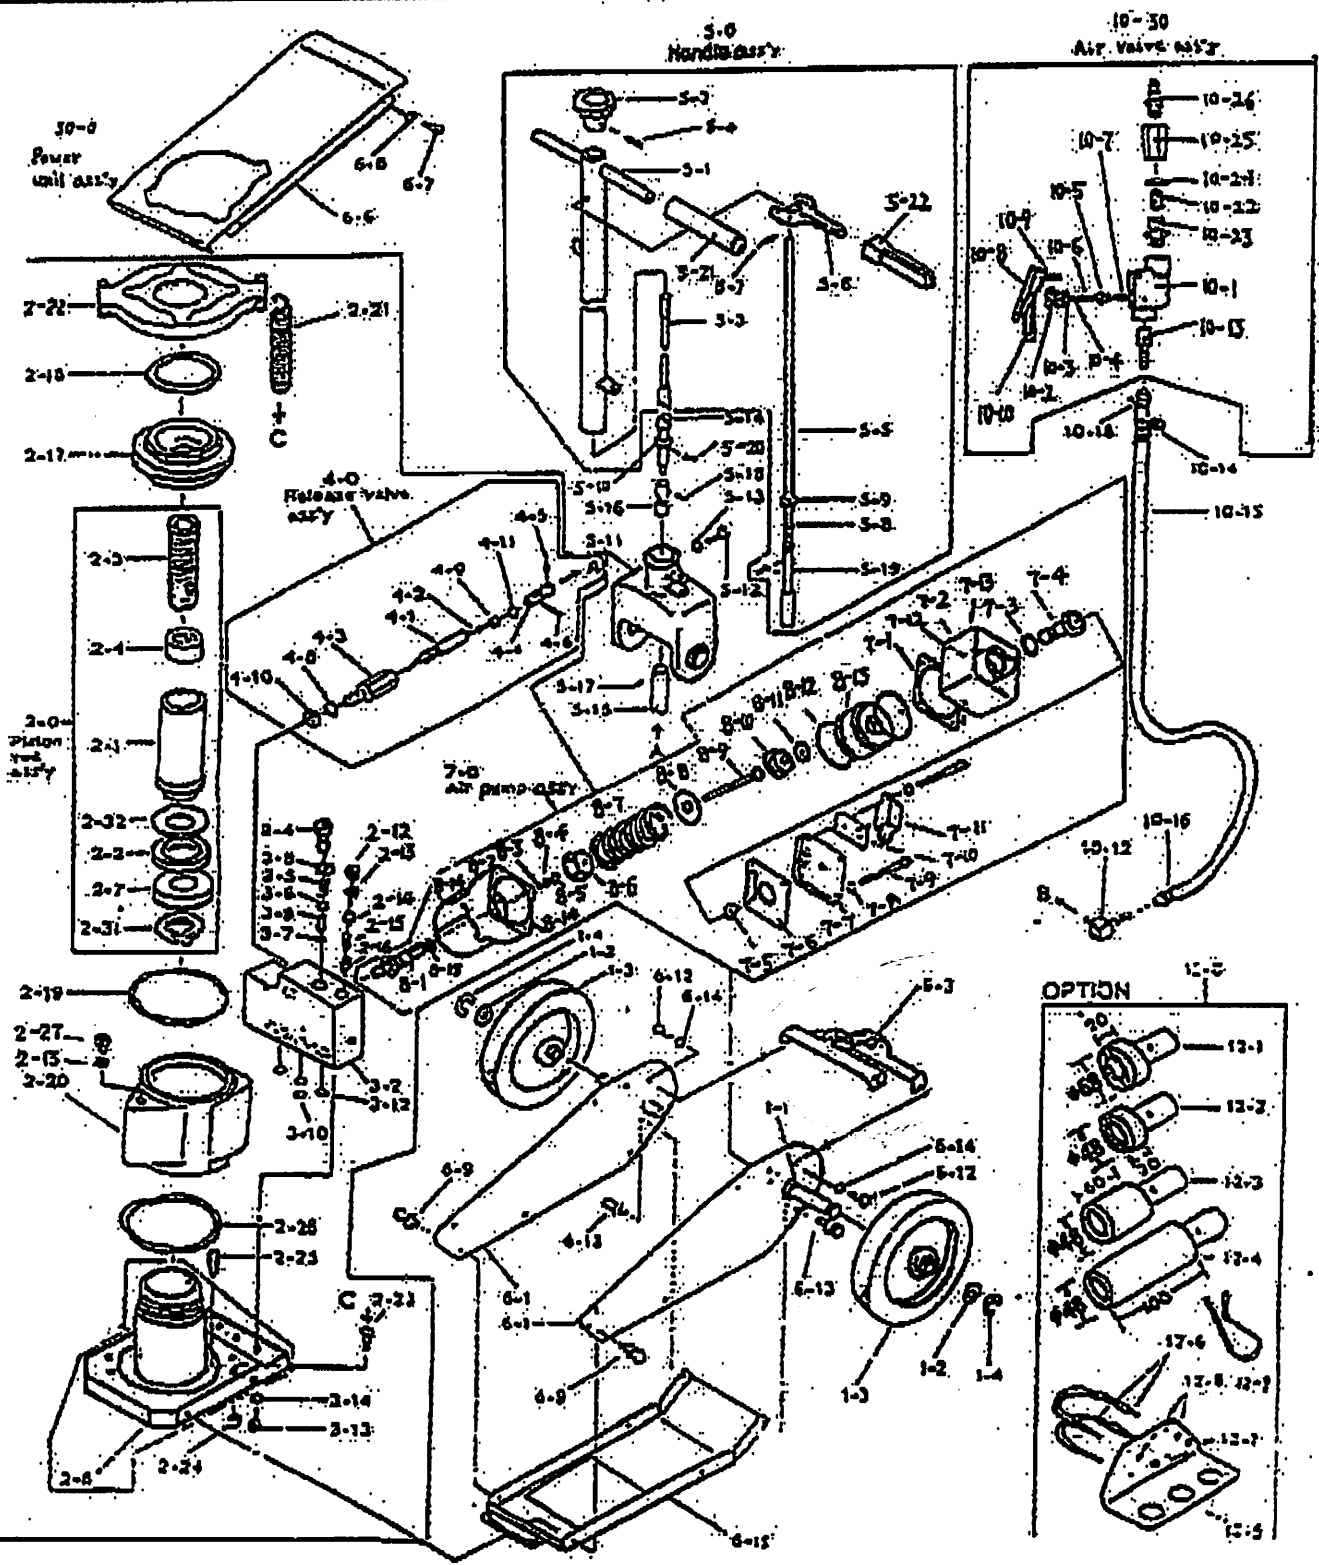

PARTS NO.	PARTS NAME	QTY/SET	PARTS NO.	PARTS NAME	QTY/SET
1-1	WHEEL SHAFT	2	5-21	HANDLE CAP	2
1-2	WASHER	2	5-22	HANDLE CAP	1
1-3	WHEEL	2	6-3	FRAME	1
1-4	SNAP RING	2	6-1	HANDLE FORK BRACKET	1
2-0	PISTON ROD ASSY	1	6-6	UPPER COVER	1
2-1	PISTON ROD	1	6-7	MACHINE SCREW	4
2-2	PACKING	1	6-8	LOCK WASHER	4
2-3	SCREW	1	6-9	BOLT	4
2-4	BUSH	1	6-12	BOLT	4
2-7	PACKING RETAINER	1	6-13	BOLT	4
2-8	CYLINDER	1	6-14	SPRING WASHER	4
2-12	BOLT	2	6-15	LOWER COVER	1
2-13	PACKING	2	7-1	PACKING WASHER	1
2-14	SPRING RETAINER	1	7-2	MUFFLER COVER	1
2-15	SPRING	1	7-3	O-RING 21.6X3.55	1
2-18	SAFETY VALVE	1	7-4	VALVE ROD	1
2-17	NUT	1	7-5	RUBBER PAD	1
2-18	OIL SEAL	1	7-6	PACKING WASHER	1
2-19	O-RING 130X3.1	1	7-7	COVER	1
2-20	OIL TANK	1	7-8	SPRING WASHER	1
2-21	SPRING	4	7-9	HEX SOCKET SCREW M3X7.0	4
2-22	SPRING NUTTING	1	7-10	FILTER ELEMENT	1
2-23	MACHINE SCREW	4	7-11	FILTER COVER	1
2-24	NUT	4	7-12	Ø3 STEEL BALL	1
2-25	OIL STRAINER	1	7-13	M6 MACHINE SCREW	2
2-26	O-RING 122X3.3	1	8-1	PLUNGER COVER	1
2-27	BREATHING SCREW	1	8-2	AIR PUMP BODY	1
2-31	SNAP RING	1	8-3	NL RETAINER	1
2-32	BACKUP RING	1	8-4	O-RING 53X3.55	1
3-2	OIL BOX	1	8-5	PACKING GUIDE	1
3-4	BOLT	1	8-6	NUT	1
3-5	SPRING	1	8-7	SPRINGS	1
3-6	STEEL BALL Ø8.5	1	8-8	WASHER	1
3-7	STEEL BALL Ø8.35	1	8-9	PLUNGER	1
3-8	COPPER PACKING	1	8-10	RETAINER	1
3-9	SEPARATOR	1	8-11	O-RING 21.6X3.55	1
3-10	BACKUP RING	1	8-12	O-RING ØØ8.7	2
3-12	O-RING 11X1.8	3	8-13	PISTON	1
3-13	BOLT	3	8-14	Ø3 STEEL BALL	2
3-14	SPRING WASHER	3	8-15	WASHER	1
4-0	RELEASE VALVE ASSY	1	10-30	AIR VALVE ASSY	1
4-1	VALVE	1	10-1	VALVE BODY	1
4-2	O-RING 14X2.4	1	10-2	NUT	1
4-3	GUIDE	1	10-3	O-RING 14X2.4	1
4-4	UNIVERSAL JOINT	1	10-4	O-RING 3X1.5	1
4-5	SPRING PIN	1	10-5	PACKING	1
4-6	SPRING PIN	1	10-6	THROTTLE	1
4-8	O-RING 15.0X2.65	1	10-7	SPRING	1
4-9	WASHER	1	10-8	LEVER	1
4-10	PACKING	1	10-9	LEVER PIN	1
4-11	SNAP RING	1	10-10	LOCK LEVER	1
5-0	HANDLE ASSY	1	10-12	PURAP ELBOW	1
5-1	HANDLE	1	10-13	HOSE CONNECTOR	1
5-2	KNOB	1	10-14	SPRING	1
5-3	CONNECTING ROD	1	10-15	AIR HOSE	1
5-4	SPRING PIN	1	10-16	HOSE BAND	2
5-5	STOPPER	1	10-22	AIR FILTER	1
5-6	LOCK LEVER	1	10-23	CONNECTOR	1
5-7	SPRING PIN	1	10-24	O-RING 18X2.4	1
5-8	SPRING	1	10-25	CONNECTING NUT	1
5-9	WASHER	1	10-26	CONNECTOR	1
5-10	WASHER	1	50-0	POWER UNIT ASSY	1
5-11	HANDLE FORK	1	12-0	HOLDER ADAPTOR ASSY(OPTION)	1
5-12	BOLT	1	12-1	ADAPTOR A	1
5-13	SPRING WASHER	1	12-2	ADAPTOR B	1
5-14	CONNECTING ROD	1	12-3	ADAPTOR C	1
5-15	CONNECTING ROD	1	12-4	ADAPTOR D	1
5-16	UNIVERSAL JOINT	1	12-5	HOLDER ADAPTOR	1
5-17	SPRING PIN	1	12-6	U-BOLT	2
5-18	SPRING PIN	1	12-7	NUT	4
5-18	SPRING PIN	1	12-8	SPRING WASHER	4
5-20	COTTER PIN	1	12-9	HITCH PIN	4