

REPAIR PARTS LIST

Parts No.	Parts Name	Q'ty/set	Parts No.	Parts Name	Q'ty/set
1-2	Washer	2	7-3	Air vent plug	1
1-3	Front wheel	2	7-4	O-ring	1
1-4	Snap ring	2	8-1	Pump plunger	1
2-1	Saddle	1	8-2	Back-up ring	1
2-3	Link rod pin(A)	1	8-3	O-ring	1
2-5	Link rod	2	8-4	Oil seal	1
2-6	Link pin (B)	2	9-1	Safety valve cap plug	1
2-7	Nut	2	9-2	Rubber packing	1
2-8	Spring washer	2	9-3	Retainer	1
3-0	Arm ass'y	1	9-4	Safety valve	1
• 2-2	• Saddle base (1 piece)		9-5	Spring	1
• 2-4	• Arm pin(A) (1 piece)		9-6	Packing	1
• 3-3	• Arm (1 piece)		10-0	Release valve ass'y	1
• 3-4	• Grease nipple (1 piece)		• 10-1	• Release valve (1 piece)	
• 3-9	• Link (2 pieces)		• 10-2	• O-ring (1 piece)	
• 3-10	• Pin (2 pieces)		• 10-3	• Release valve gear(B) (1 piece)	
3-1	Arm pin	1	• 10-5	• Release valve lock nut (1 piece)	
3-5	Piston connecting joint	1	• 10-6	• Release valve connecting rod (1 piece)	
3-6	Snap ring	1	• 10-7	• Steel ball (1 piece)	
3-7	Cotter pin	1	10-4	Collar	1
3-11	Snap ring	2	10-8	Copper packing	2
4-0	Castor ass'y	2	11-0	Handle fork ass'y	1
4-7	Spring washer	4	• 11-3	• Handle fork (1 piece)	
4-8	Bolt	2	• 12-3	• Release valve gear(A) (1 piece)	
4-9	Bolt	2	• 12-4	• Release valve connecting bar(B) (1 piece)	
5-1	Tank nut	1	• 12-5	• Cotter pin (1 piece)	
5-2	By-pass bar	1	• 12-7	• Nut (1 piece)	
5-3	By-pass rod	1	11-1	Plunger connecting pin	1
5-5	Piston rod	1	11-2	Rivet	1
5-6	Piston packing retainer	1	11-4	Handle shaft(A)	1
5-7	By-pass screw	1	11-5	Handle shaft(B)	1
5-9	Spring	1	11-6	Spring washer	2
5-10	Snap ring	1	11-7	Spring	1
5-11	Steel ball	1	12-20	Handle ass'y	1
5-12	U-type packing	1	• 12-6	• Spring pin (1 piece)	
5-13	Spring retainer	1	• 12-21	• Lower handle (1 piece)	
5-14	Oil seal	1	• 12-22	• Upper handle (1 piece)	
6-0	Oil box ass'y	1	• 12-24	• Bolt (1 piece)	
• 5-4	• Cylinder (1 piece)		12-2	Handle set screw	1
• 6-1	• Oil box (1 piece)		13-0	Frame ass'y	1
• 6-3	• Oil strainer (1 piece)		• 1-1	• Front wheel shaft (1 piece)	
• 7-1	• Oil tank (1 piece)		• 13-1	• Frame (2 pieces)	
6-2	Bolt	1	• 13-2	• Oil box stopper(A) (2 pieces)	
6-4A	Steel ball	1	• 13-4	• Oil box stopper(B) (1 piece)	
6-4B	Steel ball	1	• 13-5	• Stopper (1 piece)	
6-5	O-ring	1	13-3	Spring	1
6-11	Back-up ring	1			