



PARTS SHEET
MODEL 10-8-6
CAPACITY 1-1/2 TON
AUGUST 1, 1967

SS-135

INSTRUCTIONS

1. Upon receiving Jack, open release valve and pump actuating handle several times. Jack is now ready for use.
2. Position on level surface with center of load on saddles. Saddles should be as close to bumper brackets as possible. Wheels on car should be free to roll.
3. Release safety catches and turn hand release lever to lower.
4. Lubricate carriage rollers, wheels, casters, ram, and saddle extension bars frequently.
5. To refill, use only recommended hydraulic jack oil.

TO REMOVE POWER UNIT ASSEMBLY

1. Remove bolt that ties the ram to the bridge block.
2. Remove pin at handle socket.
3. Remove the four anchor bolts at the base of the Jack.

TO ORDER PARTS

Order parts from your Franchised Service Depots, by part number, giving complete name of part.

Part number and name of part will be found on pages 2 and 3 adjacent to illustration. Available assemblies will be found on page 4.

Repair Kit is Number 5-552

WARRANTY

Jacks, Pumps and Rams are fully guaranteed against defective material and workmanship for 90 days from date of original sale to user when submitted or shipped with proof of purchase date, transportation prepaid, to the nearest franchised service depot for inspection. This warranty does not cover units that have been altered or attachments added to them which are not recommended by the manufacturer. The use of hydraulic brake or shock absorber fluid, alcohol, kerosene or other deleterious fluids voids this warranty as does improper use through overloading or any other abusive practice or accident.

AUTO SPECIALTIES MANUFACTURING COMPANY

St. Joseph, Michigan



