



STEEL PACKING NUT
(NOT SUPPLIED WITH
PISTON)



NYLON PACKING



STOP WASHER



PIN RING



PISTON

Installation of New Hein-Werner Jointed Piston

To install new jointed piston with positive stop washer in old style jack with one piece piston and threaded packing nut, use the following procedure:

1. Dip piston in oil and tap in piston cylinder.
2. Push nylon packing (already on piston rod) in place.
3. Tighten down packing nut. Be sure packing nut is steel. If it's plastic, obtain a steel packing nut from the nearest official service station.

As the new piston pin is larger in diameter, it may be necessary to ream out the hole in the handle socket to 5/16". Assemble piston to handle socket with new pin, put pin ring retainer on pin and your jack is ready to use.

KIT # 81108

Hein-Werner Corporation

PRINTED IN U.S.A.

Waukesha, Wis.-Ajax, Ontario

7-049