

# Installation Instructions for 79012

## Low Profile Transmission Jack

### 1000 lb. Max Capacity

Maximum Height 23"  
Minimum Height 8.5"

#### **Warning**

Read all safety warnings and instructions.  
Save all warnings and instructions for future reference.  
Failure to heed these markings may result in personal injury and/or property damage:

1. Study, understand, and follow all instructions before operating this device.
2. Do not exceed 1000 lb. rated capacity.
3. Use only on hard, level surfaces.
4. Adequately support the vehicle before starting repairs.
5. Use of this product is limited to the removal, installation, and transportation in the lowered position, of transmissions, transfer cases, and transaxles.
6. Do not adjust safety valve.
7. Wear ANSI-approved safety goggles and heavy-duty work gloves during use.
8. Keep clear of load while lifting and lowering.
9. Lower load slowly.
10. Do not use for aircraft purposes.
11. Inspect before every use; do not use if parts loose or damaged.
12. Do not alter the jack or use attachments and/or adapters that are not supplied by the manufacturer.
13. The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors, which cannot be built into this product, but must be supplied by the operator.
14. The brass components of this product contain lead, a chemical known to the State of California to cause cancer, birth defects (or other reproductive harm). (California Health & Safety Code § 25249.5, et seq.)

**Save these instructions!**

#### **Setup**

Read the **ENTIRE IMPORTANT SAFETY INFORMATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

**WARNING! TO PREVENT SERIOUS INJURY:** Remove load from the jack before any procedure on this page.

**Note:** For additional information regarding the parts listed in the following pages, refer to Parts List and Diagram.

#### **Assembly**

1. Connect a Support (41) to each corner of the Saddle (32) using a Bolt (39) and Washer (40).
2. Thread a Wing Nut (37) onto the threaded end of the Chain Hook (38) with its wings facing the hook.
3. Slide a Washer (31) onto the threaded end of the Chain Hook.
4. Insert the threaded end of the Chain Hook through the hole on the bracket on the Saddle, as shown.
5. Secure the Chain Hook to the Saddle's bracket using Washer (31) and Wing Nut (37).

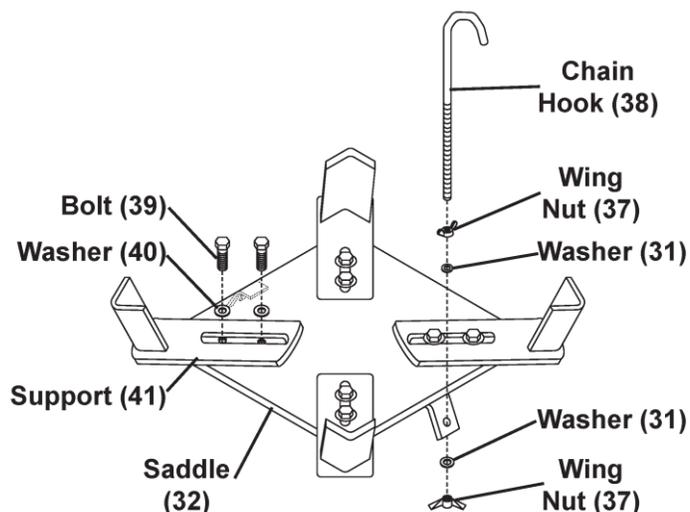


Figure A: Assembly



1-800-345-4545 [jeps.com](http://jeps.com)

### **Checking/Filling Hydraulic Fluid**

#### **IMPORTANT! Before first use:**

1. Remove the Oil Fill Plug.
2. Check hydraulic oil level and fill to 1/4" below the fill port as needed.
3. Replace the Oil Fill Plug.
4. Thoroughly test the Jack for proper operation. If it does not work properly, bleed air from its hydraulic system as described in Bleeding, below.

### **Bleeding**

1. Follow the Checking/Filling Hydraulic Fluid instructions above.
2. Turn the Release Valve counterclockwise to open it.
3. Pump the Handle up and down quickly several times to purge air from the system.
4. Check hydraulic oil level and fill to 1/4" below the fill port as needed.
5. Replace the Oil Fill Plug and close the Release Valve by turning it clockwise.

### **Operation**

Read **ENTIRE IMPORTANT SAFETY INFORMATION** section at beginning of this manual including all text under subheadings therein before set up or use of this product.

### **Removing a Transmission**

1. Before every use, check and/or fill Hydraulic Fluid.
2. Once the vehicle is raised and secured on a lift, clear the area underneath the vehicle of people and tools.
3. Remove the Chain and set aside.
4. Move the Transmission Jack underneath the transmission.
5. Close the Release Valve.
6. Pump the Handle to raise the Transmission Jack.
7. Stop just below the transmission and align the Saddle to the Transmission with the Tilt Knobs.
8. Continue raising the Saddle up to the transmission to determine where you will need to adjust the Supports. All four Supports need to grip and make contact with the transmission.
9. After determining where they need to be set, loosen the threaded bolts on each Support, and adjust it to the proper setting for the transmission. Tighten the bolts.
10. Raise the unit again to make contact with the transmission, making sure all of the Supports are in firm contact.
11. Hook the chain on the open bracket, wrap the Chain securely around the transmission, and hook the chain hook through the other end. Tighten the Chain Hook securely to tighten the chain.
12. Once it is securely fastened, release the bolts holding the transmission in place.
13. Make sure the area is clear of people and tools, and verify that the transmission is securely held in place. Then, slowly open the Release Valve to lower the Transmission Jack.
14. Move the Transmission Jack from under the vehicle and perform your desired maintenance.

### **Replacing a Transmission**

1. Move the Transmission Jack so that the transmission is lined up properly with its connection points.
2. Close the Release Valve.
3. Pump the Handle to gradually raise the Transmission Jack, while guiding it into place.
4. Secure the transmission into place using its hardware.
5. Double-check to make sure the transmission is securely installed.
6. Disconnect the Chain and remove it.
7. Clear the area near the Transmission Jack, and slowly open the Release Valve to lower the Jack.
8. Move the Transmission Jack clear of the vehicle.



**1-800-345-4545 [jeps.com](http://jeps.com)**

## Maintenance and Servicing

Procedures not specifically explained in this manual must be performed only by a qualified technician.

### WARNING!

**TO PREVENT SERIOUS INJURY FROM TOOL FAILURE:** Do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

1. **BEFORE EACH USE**, inspect the general condition of the equipment. Check for:
  - loose hardware,
  - misalignment or binding of moving parts,
  - visibly leaking hydraulic fluid,
  - cracked or broken parts, and
  - any other condition that may affect its safe operation.
2. Before each use and after the inspection, thoroughly test the Jack for proper operation prior to its actual use. If the Jack appears not to be working properly, follow **Bleeding** instructions.
3. Periodically, inject grease into the Zerk fitting on the main platform of the Transmission Jack.
4. **Change the hydraulic oil at least once every three years:**
  - a. With the Jack fully lowered, remove the Oil Filler Plug on the side of the Housing.
  - b. Tip the Jack to allow the old hydraulic oil to drain out of the Housing completely, and dispose of the old hydraulic oil in accordance with local regulations.
  - c. With the Jack upright, completely fill the Housing with a high quality hydraulic oil (not included) until the oil just begins to run out of the Oil Fill Hole.
  - d. Open the Release Valve and pump the Handle to bleed air from the system.
  - e. Reinstall the Oil Filler Plug.
5. Wipe dry with a clean cloth. Then, store the Jack in a safe, dry location out of reach of children and other non-authorized people.

## Troubleshooting

### WARNING!

**TO PREVENT SERIOUS INJURY:** Use caution when troubleshooting malfunctioning jack. Stay clear of supported load. Completely resolve all problems before use. If solutions presented in Troubleshooting guide do not solve the problem, have a qualified technician inspect and repair jack before use. **After jack is repaired: Test it carefully without a load by raising and lowering it fully, checking for proper operation, BEFORE RETURNING JACK TO OPERATION.**

### DO NOT USE A DAMAGED OR MALFUNCTIONING JACK!

POSSIBLE SYMPTOMS						PROBABLE SOLUTION (Make certain that the Jack is not supporting a load while attempting a solution.)
Jack will not lift at its weight capacity	Saddle lowers under load	Pump stroke feels spongy	Saddle will not lift all the way	Handle moves up when Jack is under load	Oil leaking from Filler Plug	
X	X					Check that Release Valve is closed fully. Bleed air from the system.
X	X			X		Valves may be blocked and may not close fully. To flush the valves: 1.1. Lower the Saddle and securely close the Release Valve. 2. Manually lift the Saddle several inches. 3. Open the release valve and force the Saddle down as quickly as possible.
X		X	X			Jack may be low on oil. Check the oil level and refill if needed. Jack may require bleeding - see instructions
					X	Unit may have too much hydraulic oil inside, check fluid level and adjust if needed.



1-800-345-4545 [jeps.com](http://jeps.com)

## Parts List and Diagram

Part	Description	Qty	Part	Description	Qty
1	Bolt M6x16	16	22	Spring Pin Ø4.5x25	2
2	Caster	4	23	Shaft	1
3	Snap Ring "C" Ø22	2	24	Bearing	4
4	Washer Ø6	18	25	Shaft	1
5	Lock Washer Ø6	16	26	Nut M10	2
6	Nut M6	16	27	Snap Ring "c" Ø18	4
7	Hex Bolt M8x20	2	28	Shaft	1
8	Lock Washer Ø8	2	29	Short Screw Rod	1
9	Washer Ø8	2	30	Nut M12	1
10	Base Assembly	1	31	Washer Ø12	3
11	Hydraulic Pump Unit	1	32	Support	1
12	Long Shaft	1	33	Shaft	1
13	Split Pin 6x45	1	34	Tight Nut M10	1
14	Lifting Arm Assembly	1	35	Shaft	1
15	Long Connecting Rod	2	36	Chain	1
16	Snap Ring "c" Ø16	6	37	Wing Nut M6	2
17	Shaft	1	38	Hook	1
18	Shaft Sleeve	2	39	Bolt M10x16	8
19	Short Connecting Rod	2	40	Washer Ø10	14
20	Long Screw Rod	1	41	Shifting Stand	4
21	Turning Plate	1	42	Handle Assembly	1

