



Model PR50

50 Ton Capacity Pump and Ram

OPERATING INSTRUCTIONS

To Retract Ram. Open release valve by turning to left. Pump several full strokes to eliminate air. Close release valve by turning to right until tight, then continue pumping.

To Lower: Turn release valve handle to right slowly until tight.

To Maintain Oil Level: With ram in the retracted position add hydraulic jack oil to filler screw level.

CAUTION: Do not use brake or shock absorber fluid, glycerine, alcohol, or dirty oil. If ram still d