Air/Hydraulic Service Jack

Model 565B AND C

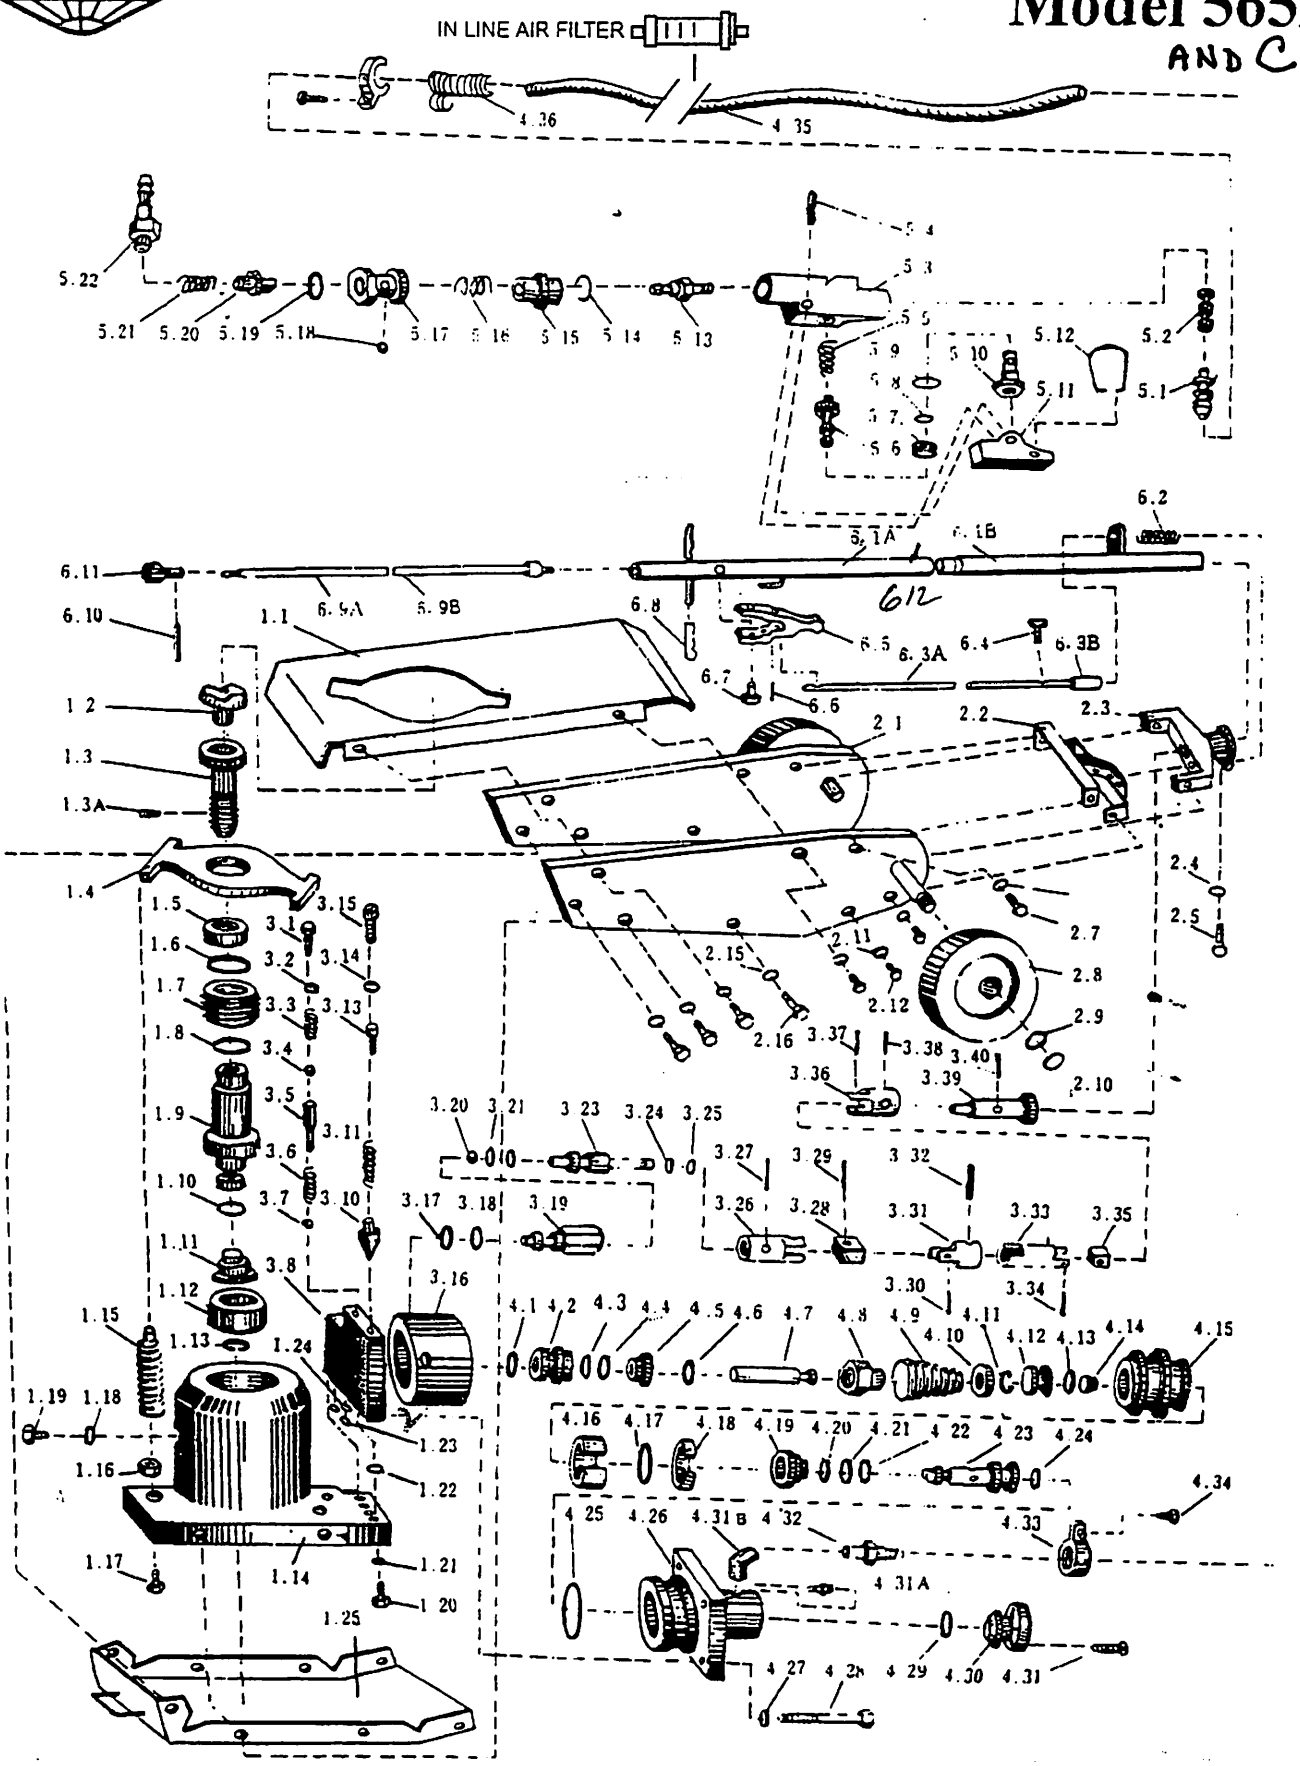

TRI-CITY HYDRAULIC JACK SERVICE
4628 N. Florida Avenue
Tampa, Florida 33603-3700
(813) 236-8551

565 B + C

PARTS LIST

PART NO.	DESCRIPTION
1.1	Cover
1.2	Saddle
1.3	Extension Screw
1.3A	Spring Pin
1.4	Spring Support
1.5	Screw Bushing
1.6	Y-Shape Seal Ring *
1.7	Head Nut
1.8	O-Ring *
1.9	Piston Rod
1.10	Stop Ring
1.11	U-Shape Seal Ring *
1.12	Piston Head
1.13	Elastic Stop Ring
1.14	Cylinder Base
1.15	Spring
1.16	Nut
1.17	Screw
1.18	O-Ring *
1.19	Screw
1.20	Screw
1.21	Washer
1.22	O-Ring *
1.23	O-Ring *
1.24	O-Ring *
1.25	Chasis Base
2.1	Side Plate
2.2	Angle Bracket
2.3	Handle Fork
2.4	Washer
2.5	Fastening Screw
2.6	Washer
2.7	Bolt
2.8	Wheel
2.9	Washer
2.10	Track Ring
2.11	Washer
2.12	Screw
2.1	Screw
2.15	Washer
2.16	Bolt
3.1	Screw
3.2	Washer
3.3	Spring
3.4	Steel Ball
3.5	Valve Core
3.6	Spring
3.7	Steel Ball
3.8	Cylinder Base
3.10	Valve

PART NO.	DESCRIPTION
3.11	Spring
3.13	Screw
3.14	O-Ring *
3.15	Screw
3.16	Pump Body
3.17	Washer
3.18	O-Ring *
3.19	Release Valve Body
3.20	Steel Ball
3.21	O-Ring *
3.23	Release Valve
3.24	Washer
3.25	Stop Ring
3.26	Fork Axle with Hole
3.27	Steel Wire
3.28	Connecting Block
3.29	Spring Pin
3.30	Spring Pin
3.31	O-Ring
3.32	Pin
3.33	Joint
3.34	Steeel Wire
3.35	Connecting Block
3.36	Fork Axle with Hole
3.37	Spring Pin
3.38	Spring Pin
3.39	Connecting Axle
3.40	Spring Pin
4.1	Washer
4.2	Union
4.3	O-Ring *
4.4	Seal Ring *
4.5	Plug Bushing
4.6	O-Ring
4.7	Plug
4.8	Cap
4.9	Spring
4.10	Spring Holder
4.11	Clamp Ring
4.12	Steel Bushing
4.13	O-Ring *
4.14	Seal Plug
4.15	Piston
4.16	Flouroplastics Plate *
4.17	O-Ring *
4.18	Seal Ring *
4.19	Seal Throttle
4.20	Washer
4.21	O-Ring *
Filter	In Line Air Filter

PART NO.	DESCRIPTION
4.22	O-Ring *
4.23	Throttle Rod
4.24	O-Ring *
4.25	O-Ring *
4.26	Air Pump Body
4.27	Washer
4.28	Bolt
4.29	O-Ring *
4.30	Back Cover
4.31	Screw
4.31A	Screw Tube
4.31B	Elbow Joint
4.32	Union
4.33	Spiral Clamp Ring
4.34	Screen
4.35	Rubber Hose
4.36	Spring
5.1	Union
5.2	Filter Nozzle
5.3	Case
5.4	Pin
5.5	Spring
5.6	Piston Rod
5.7	Seal Ring
5.8	O-Ring
5.9	O-Ring
5.10	Throttle
5.11	Handle Cover
5.12	Locking Spring
5.13	Union
5.14	Spring Clamp Ring
5.15	Bushing
5.16	Spring
5.17	Screw Bushing
5.18	Steel Ball
5.19	Seal Ring
5.20	Valve Core
5.21	Spring
5.22	Union
6.1A.B	Outside Tube(2 parts)
6.2	Spring
6.3A.B	Adjustable Rod
6.4	Split Pin
6.5	Lock Lever
6.6	Spring Pin
6.7	Hexagon-headed Screw
6.8	Handle
6.9A.B	Control Rods(2 parts)
6.10	Spring Pin
6.11	Knob
6.12	HANDLE SPLICE BOLT

ITEMS MARKED WITH " * " COMPRISE REPAIR KIT