REPAIR PARTS LIST

1000 LB.CAPACITY TELESCOPIC TRANS JACK

MODEL YHMJ-500MS

50-0 Hydraulic power unit ass'y

7-0A Saddle head attachment ass'y

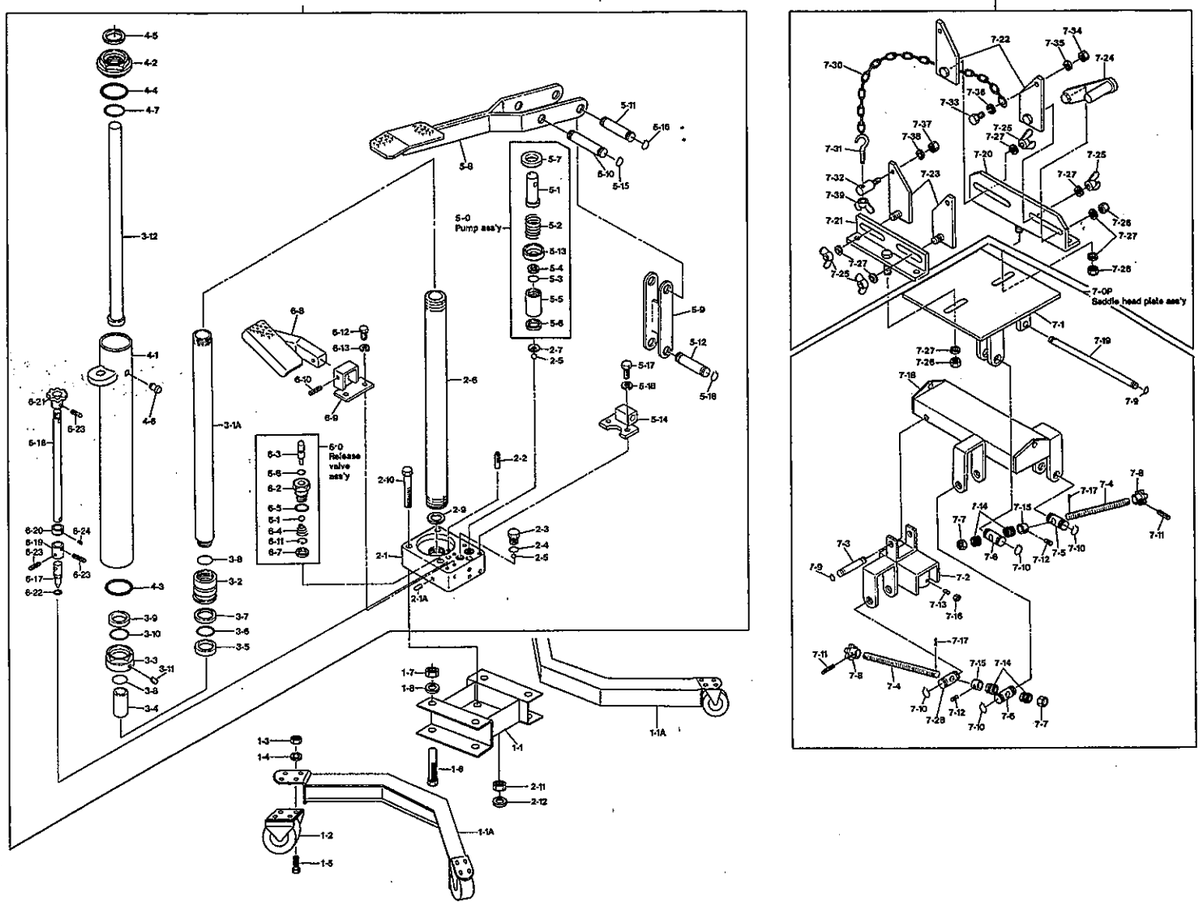

Part No.	Part Description	Q'ty/set	Price (US$)FOB
1-1A	Leg	2	
1-1	Chassis	1	
1-2	Swivel Caster	4	
1-3	Nut	16	
1-4	Spring Washer	16	
1-5	Bolt	16	
1-6	Bolt	4	
1-7	Spring Washer	4	
1-8	Nut	4	
2-1	Oil Box	1	
2-1A	Plug With Hex Head Hole	7	
2-2	Oil Strainer	1	
2-3	Blind Bolt	1	
2-4	Copper Packing	1	
2-5	Steel Ball	2	
2-6	Cylinder	1	
2-7	Lock Washer	1	
2-9	Copper Packing	1	
2-10	Bolt	3	

Part No.	Part Description	Q'ty/set	Price (US$)FOB
2-11	Spring Washer	3	
2-12	Hex Head Nut	3	
3-1A	Piston Rod (Big)	1	
3-2	Packing Step	1	
3-3	Grand Nut	1	
3-4	Sleeve	1	
3-5	Extra Wearing	1	
3-6	"O" Ring	2	
3-7	Back-up Ring	1	
3-8	"O" Ring	2	
3-9	Oil Seal	1	
3-10	"O" Ring	1	
3-11	Plug with Hex Head Hole	1	
3-12	Piston Rod (Small)	1	
4-1	Oil Tank	1	
4-2	Tank Nut	1	
4-3	"O" Ring	1	
4-4	"O" Ring	1	

Part No.	Part Description	Q'ty/set	Price (US$)FOB
4-5	Oil Seal	1	
4-6	Oil Fill Cap	1	
4-7	O-Ring	1	
5-0	**Pump Ass'y**		
●5-1	Plunger	1	
●5-2	Spring	1	
●5-3	"O" Ring	1	
●5-4	Oil Seal	1	
●5-5	Pump Cylinder	1	
●5-6	Copper Packing	1	
●5-7	Spring Retainer	1	
5-8	Foot Pedal For Lifting	1	
5-9	Link	1	
5-10	Plunger Pin	1	
5-11	Pin A	1	
5-12	Pin B	1	
5-13	Spring Retainer B	1	
5-14	Link Bracket	1	
5-15	Cotter Pin	2	
5-16	Cotter Pin	4	
5-17	Hex Head Bolt	2	
5-18	Spring Washer	1	
6-0	**Release Valve Ass'y**	1	
●6-1	Steel Ball	1	
●6-2	Release Valve Lock Nut	1	
●6-3	Throttle	1	
●6-4	Spring	1	
●6-5	"O" Ring	1	
●6-6	"O" Ring	1	
●6-7	Copper Packing	1	
●6-11	Snap Ring	1	
6-8	Foot Pedal For Lowering (release valve)	1	
6-9	Pedal Bracket	1	
6-10	Spring Pin	1	
6-12	Heax Head Bolt	1	
6-13	Spring Washer	2	
6-17	Release Valve	1	
6-18	Release Valve Rod	1	
6-19	Collar	1	
6-20	Stop Collar	1	
6-21	Release Valve Grip	1	
6-22	"O" Ring	1	
6-23	Spring Pin	3	
6-24	Screw	1	

Part No.	Part Description	Q'ty/set	Price (US$)FOB
7-0P	**Saddle Head Plate Ass'y**		
●7-1	Saddle Head	1	
●7-2	Saddle Head Plate	1	
●7-3	Connecting Pin A	1	
●7-4	Screw	2	
●7-5	Female Screw A	1	
●7-6	Pin A	1	
●7-7	Hex Head Fluted Nut	1	
●7-8	Grip	2	
●7-9	Snap Ring	4	
●7-10	Snap Ring	8	
●7-11	Snap Pin	2	
●7-12	Screw	2	
●7-13	Screw	1	
●7-14	Thrust Bearing	4	
●7-15	Handle Collar	2	
●7-16	Hex Head Nut	1	
●7-17	Cotter Pin	1	
●7-18	Tilting Base	1	
●7-19	Conecting Pin B	1	
●7-28	Female Screw A	1	
7-0A	**Saddle Head Attachment Ass'y**	1	
●7-20	Saddle Head Bracket A	1	
●7-21	Saddle Head Bracket B	1	
●7-22	Saddle Head Attachment A	4	
●7-23	Saddle Head Attachment B	2	
●7-24	Saddle Head Attachment C	1	
●7-25	Wing Nut	4	
●7-26	Hex Head Nut	3	
●7-27	Washer	7	
●7-30	Ring Chain	1	
●7-31	Hook With Screw	1	
●7-32	Hook Pin	1	
●7-33	Hex Head Bolt	1	
●7-34	Hex Head Nut	1	
●7-35	Spring washer	1	
●7-36	Washer	1	
●7-37	Hex Head Nut	1	
●7-38	Spring Washer	1	
●7-39	Wing Nut	1	
50-0	**Hydraulic Power Unit Ass'y**		

REPAIR KIT

Part No.	Part Description	Q'ty/set	Price (US$)FOB
3-5	Extra Wearing	1	
3-6	"O" Ring	2	
3-7	Back-Up Ring	1	
3-8	"O" Ring	2	
3-9	Oil Seal	1	
3-10	"O" Ring	1	
4-3	"O" Ring	1	
4-4	"O" Ring	1	
4-5	Oil Seal	1	
4-7	"O" Ring	1	
5-3	"O" Ring	1	
5-4	Oil Seal	1	
5-6	Copper Packing	1	
6-5	"O" Ring	1	
6-6	"O" Ring	1	
6-7	Copper Packing	1	
	TOTAL : ONE SET	**18 PCS.**	

The above prices subject to change without notice.

Printed in japan