


**MODEL V1.23, E1.7F, E3.9A, E5.9A, E8.9A, E12.9A
"SERIES 1"
HYDRAULIC JACK
REPAIR PARTS LIST**

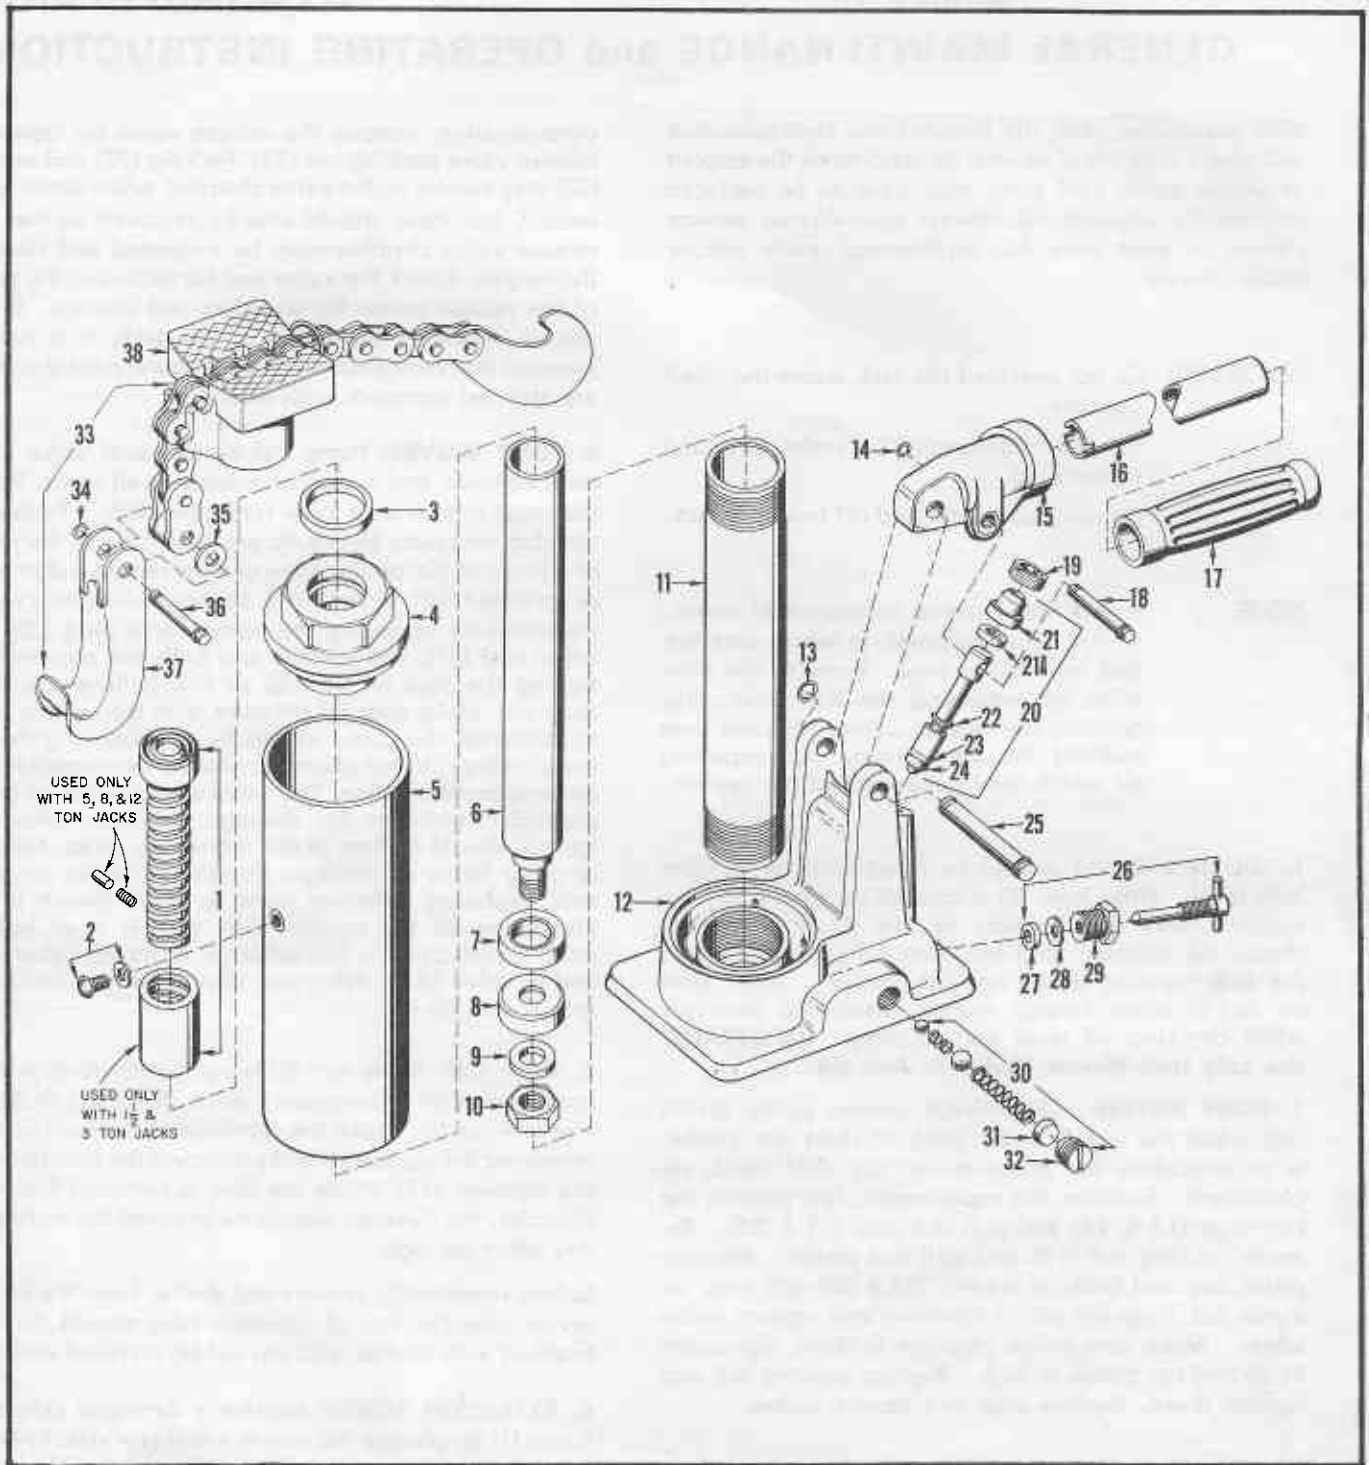

Item numbers shown above are only for your convenience in locating the part on the parts list. When ordering, always specify the PART NUMBER — not the item number — and give complete name of part and model number of jack. If the length of the part is shown on the parts list, verify it with the old part. If different, state exact length and diameter of old part.

ORDER REPAIR PARTS DIRECT FROM NEAREST HEIN-WERNER OFFICIAL SERVICE STATION

REV. 8-1-74

HEIN-WERNER CORP. WAUKESHA, WISCONSIN 53186

■ AJAX, ONTARIO

**MODEL V1.23, E1.7F, E3.9A, E5.9A, E8.9A, E12.9A
"SERIES 1"
HYDRAULIC JACK
REPAIR PARTS LIST**

	MODEL V1.23-1	MODEL E1.7F-1	MODEL E3.9A-1	MODEL E5.9A-1	MODEL E8.9A-1	MODEL E12.9A-1
Item No. Description	Part No.	Part No.	Part No.	Part No.	Part No.	Part No.
1 Extension Screw Assembly		7863	9467	12759	12883	14983
2 Filler Screw & Washer	25620	25620	25620	25620	25620	25620
3 Quad Ring	20625	20625	20675	20725	20750	20785
4 Top Nut	60212	60205	10423	13128	15597	1837
5 Reservoir Tube	60213	60207	10650	13170	15661	14934
6 Ram Assembly	7750	8180	9460	12730	12810	14895
Backing Washer (Not Shown)	3440					
7 Spacer	1690	1720	10710	13210	15165	2060
8 Cup	2525	2525	11115	13290	15245	2160
9 Retainer	1970	1970	11030	13260	15210	2105
10 Hex Jam Nut	26270	26270	18960	18960	18960	18960
11 Cylinder	945	970	10580	13145	15630	1860
12 Base w/Pump Valves	60370	60204	60296	60361	60376	60366
13 Pin Ring	12415	12415	12415	12415	12415	12415
14 Pin Ring	12415	12415	12415	12415	12415	12415
15 Handle Socket	62434	62434	62433	62433	62433	62433
16 Handle Assembly	3465	8210	9595	9595	9595	9595
17 Handle Grip			9330	9330	9330	9330
18 Pin	60287	60287	60288	60288	60288	60288
19 Packing Nut	60599	60599	60599	60599	60599	60599
20 Piston Assembly	81107	81107	81108	81108	81108	81108
21 Nylon Wiper	60621	60621	60621	60621	60621	60621
21A Washer	62429	62429	62429	62429	62429	62429
22 Pin Ring	12415	12415	12415	12415	12415	12415
23 B U Washer	5945	5945	5945	5945	5945	5945
24 U Cup	3910	3910	3910	3910	3910	3910
25 Pin	1760	1760	10860	10860	10860	10860
26 Release Screw Assembly	8020	8020	8020	8020	8020	8020
27 Packing	4520	4520	4520	4520	4520	4520
28 Washer	6230	6230	6230	6230	6230	6230
29 Nut	1290	1290	1290	1290	1290	1290
30 Pump Valves	80127	80127	80345	80346	80348	80348
31 Seal	11520	11520	11520	11520	11520	11520
32 Plug	11855	11855	11855	11855	11855	11855
33 Chain & Hook Assembly	60000					
34 Pin Ring	12415					
35 Washer	25242					
36 Pin	1740					
37 Hook	42051					
38 Ram Head	7405					
39 Decal	55384	55408	55412	55433	55424	55430

REPAIR KIT

80735 80735 80737 80738 80739 80740