




# Engine Stand

## Operating Instructions & Parts Manual

Model Number    Capacity  
HW93776        3 Ton



**Made in the  
U.S.A.**

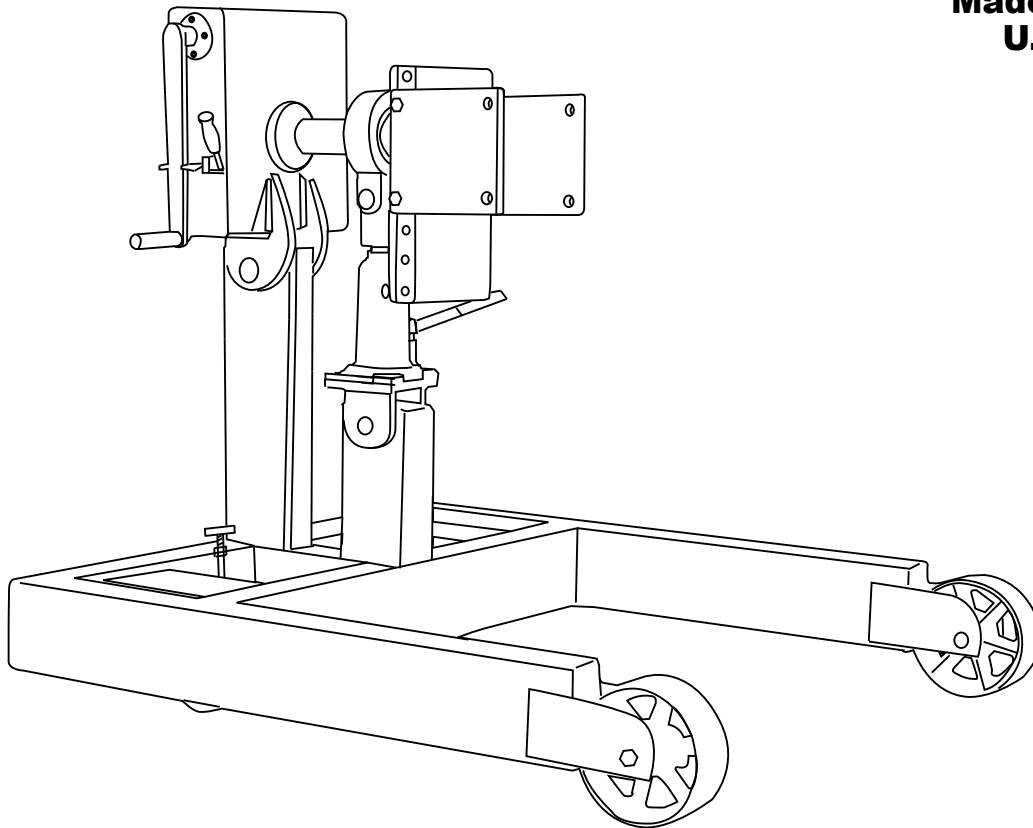

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

SFA Companies  
10939 N. Pomona Ave. Kansas City, MO 64153  
customerservices@heinwerner-automotive.com

**Read this manual and follow all the Safety Rules and Operating Instructions before using this product.**

## SAFETY and GENERAL INFORMATION

**Save these instructions.** For your safety *read, understand, and follow* the information provided with and on this stand before using. The owner and operator of this equipment shall have an understanding of the stand and safe operating procedures before attempting to use. The owner and operator shall be aware that use of this product may require special skills and knowledge. Instructions and safety information shall be conveyed in the operator's native language before use of this stand is authorized. If any doubt exists as to the safe and proper use of this stand, remove from service immediately.

**Inspect before each use.** Do not use if broken, bent, cracked, or damaged parts (including labels) are noted. Any stand that appears damaged in any way, operates abnormally or is missing parts, shall be removed from service immediately. If you suspect that the stand was subjected to a shock load (a load dropped suddenly, unexpectedly upon it), immediately discontinue use until the stand has been checked by a factory authorized service center (contact distributor or manufacturer for list of Authorized Service Centers). It is recommended that an annual inspection be done by qualified personnel. Labels and owner's manuals are available from manufacturer.

## PRODUCT DESCRIPTION

Hein-Werner Engine stand is designed to safely rotate and support a rated capacity automotive engine, during that time that the engine is being rebuilt or repaired.



*Do not use for any purpose other than those uses outlined above!*

## SPECIFICATIONS

| Model   | Capacity | Overall Size<br>(L x W x H) | Rotational Clearance (from<br>Mounting Head Axle to Ground) | Shipping Weight |
|---------|----------|-----------------------------|---|-----------------|
| HW93776 | 3 Ton    | 51" x 47-1/4" x 45-3/4"     | 37-1/2" to 43-1/2"  | 631 lbs.        |

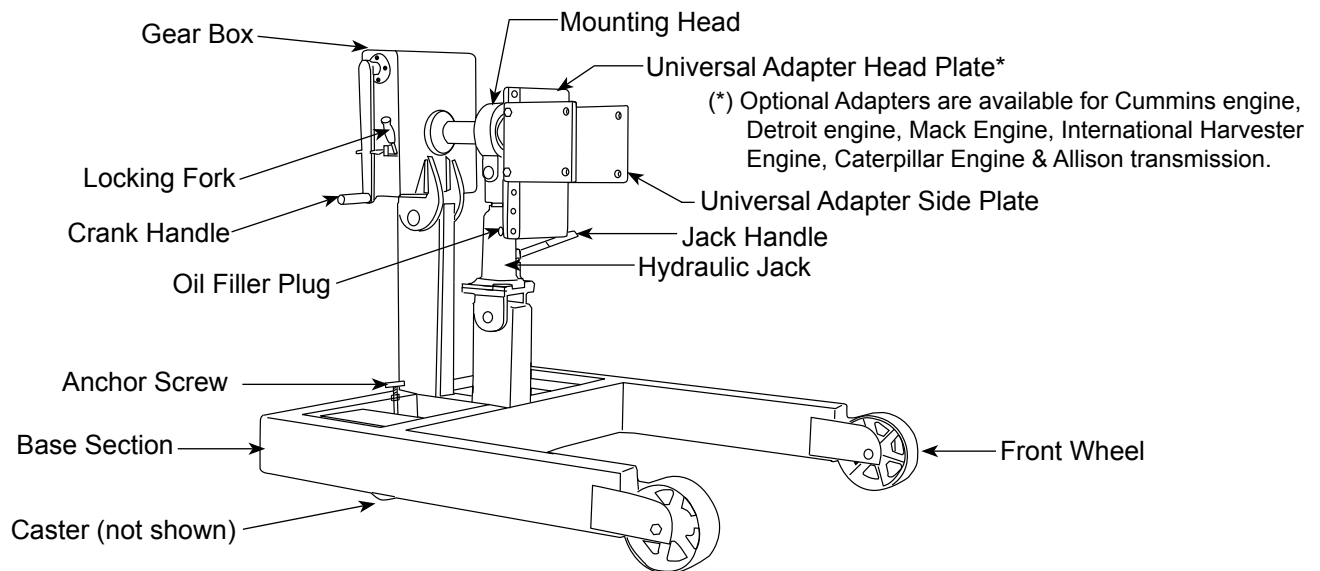





Figure 1 - HW93776 Engine Stand Components

## BEFORE USE

1. Before using this product, read the owner's manual completely and familiarize yourself thoroughly with the product and the hazards associated with its improper use.
2. Verify that the product and the application are compatible, if in doubt call Hein-Werner Tech. Service (816)891-6390.
3. Inspect engine stand before each use. Do not use if there are bent, broken or cracked components (including labels).
4. Ensure that casters/wheels and adapter plate rotate freely. Check for and tighten any loose assemblies.

|  <b>WARNING</b>   |
|--|
| <ul style="list-style-type: none"><li>• <b>Study, understand, and follow all instructions</b> provided with/on this device <b>before use.</b></li><li>• <b>Do not</b> exceed rated capacity.</li><li>• Use <b>only</b> on a hard, level surface.</li><li>• Use original engine mounting bolts or hardened, appropriate sized bolts to secure engine to stand.</li><li>• Always apply rotating mechanism slowly and carefully.</li><li>• Lock mounting plate rotating mechanism before applying load (engage the crank handle locking fork).</li><li>• Center the engine on the adapter plate and ensure attaching hardware is tightly fastened. Off-center loading may cause the loaded stand to suddenly tip or flip violently without warning.</li><li>• Never work under a loaded engine stand.</li><li>• Do not modify nor substitute hardware to this device.</li><li>• Only attachments and/or adapters supplied by the manufacturer shall be used.</li><li>• Do not use the device for any purpose other than that for which it is intended.</li><li>• Failure to heed these markings may result in personal injury and/or property damage.</li></ul> |


|  <b>WARNING</b> |  |
|---|--|
|                 | To avoid crushing and related injuries:<br><b>NEVER</b> work under a loaded stand. Keep body from underneath engine. |

|  <b>ADVERTENCIA</b>  |
|---|
| <ul style="list-style-type: none"><li>• Leer, comprender, y seguir las instrucciones antes de utilizar el aparato.</li><li>• El manual de instrucciones y la información de seguridad deben estar comunicado en lengua del operador antes del uso.</li><li>• No seguir estas indicaciones puede causar daños personales o materiales.</li></ul> |

## SET UP

1. This engine stand is equipped with a universal adapter which can be configured to fit most engines. Optional adapters are available, refer to replacement parts section.
2. Determine the correct adapter for the engine you are working on and tighten all hardware that attaches the adapter to the engine stand's mounting head.
3. Occasionally hydraulic jacks become air bound and will not function properly. To correct this condition:
  - a. Open release valve with notched end of jack handle by turning it counter-clockwise no more than 1/2 turn.
  - b. With ram piston fully retracted, remove oil filler plug.
  - c. Insert jack handle into handle socket, then pump 6 to 8 strokes. This will allow any pressurized air to escape.
4. Ensure oil level is even with or just below the oil filler plug hole before re-install the oil filler plug.

## OPERATION

 **ALWAYS** verify that the product and the application are compatible. **NEVER** load the engine stand with an engine that extends beyond an imaginary line drawn connecting the centerlines of the front and rear wheel/caster axles as show in Figure 2.

1. Familiarize yourself with the operating features of the engine stand:
  - a. Crank Handle: To turn the head plate and engine 360 degrees if necessary.
  - b. Locking Fork: To lock the crank handle in position before moving the engine stand and/or working on an engine.
  - c. Hydraulic Bottle Jack: It is used to raise the engine stand mounting head for additional clearance when the engine is rotated.
  - d. Anchor Screw: It is a floor lock that keeps the stand from moving during repairs.
  - e. Universal Adapter includes a head plate which bolts to the mounting head and two side plates which bolt to the sides of the head plate.
2. Lift the engine with proper equipment; for instance, engine crane. Install optional adapter if necessary.
3. Remove the universal adapter side plates from the head plate and bolt them to the engine or optional engine adapter. Do not tighten these bolts yet.

**Note.** Use original engine mounting bolts or grade 8 bolts long enough to provide adequate thread engagement. Ensure threads are compatible with your engine. (Grade 8 bolt has six diagonal lines on top of the hex head.)
4. Align the side plates on the engine with the head plate on the engine stand.
5. Align the closest tapped holes in the sides of the head plate with the holes of the side plates and secure them together with bolts provided.
6. Ensure the load/engine is **centered** on the engine stand.
7. Tighten all hardware and **lock the rotating mechanism** by engaging the crank handle with locking fork before removing the support and lifting equipment from the engine.
8. Ensure the anchor screw floor lock is engaged before operating the engine stand and/or repairing the engine.
9. To rotate the engine, disengage the locking fork and rotate the engine slowly and carefully with crank handle.
10. To tilt the engine for additional clearance when rotating the engine, operate the hydraulic bottle jack:
  - a. To raise: Close release valve with notched end of jack handle by turning it clockwise firmly. Pump the jack until desire height reach.
  - b. To lower: open release valve with the notched end of jack handle by turning it counter-clockwise slowly and carefully no more than 1/2 turn.
11. After the engine is in proper working position, lock the crank handle in place and lower the mounting head to its lowest possible position. Keep the jack at its lowest possible position in order to avoid tipping while working on the stand.
12. Ensure that engine stand is secure before working on or around. **Never** work under loaded stand.

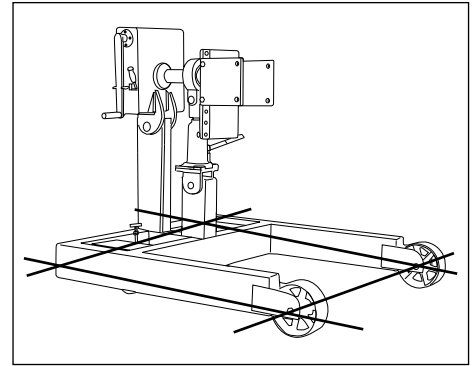



Figure 2

 **Never** put any portion of your body under engine when it is supported by the engine stand. **Do not** move loaded stand off hard smooth, level surface!

## MAINTENANCE

Periodically inspect each stand. Ensure all parts move freely. Lubricate the wheels and casters periodically. To help prevent rust, wipe clean after each use. If rust appears, sand affected area and cover with suitable utility paint.

### Hydraulic Jack

**Important:** Use only a good grade hydraulic jack oil. Avoid mixing different types of fluid and **Never** use brake fluid, turbine oil, transmission fluid, motor oil or glycerin. Improper fluid can cause failure of the jack and the potential for sudden and immediate loss of load. We recommend Hein-Werner hydraulic jack oil HW93291 or equivalent.

#### Adding oil

1. Remove jack from **UNLOADED** stand.
2. Lower saddle fully, set jack in its upright, level position.
2. Locate and remove oil filler plug.
3. Fill with oil even with the bottom of oil filler plug hole. Reinstall oil filler plug.

#### Changing oil

For best performance and longest life, replace the complete hydraulic fluid at least once a year.

1. Remove jack from stand.
2. Lower saddle fully, remove oil filler plug.
3. Lay the jack on its side and drain the fluid into a suitable container.

**Note:** Dispose of hydraulic fluid in accordance with local regulations.

4. Fill with oil even with the bottom of oil filler plug hole. Reinstall oil filler plug.

#### Lubrication

A periodic coating of light lubricating oil to pivot points will help to ensure that pump piston linkages move freely.

**Note:** Never apply oil to the saddle.

#### Cleaning

Periodically check the pump piston and ram for signs of rust or corrosion. Clean as needed and wipe with an oily cloth.

**Note:** Never use sandpaper or abrasive material on these surfaces!

# REPLACEMENT PARTS

Not all components of the stand are replacement items, but are illustrated as convenient reference of location and position in the assembly sequence. When ordering parts, give Model number, serial number and parts description. Contact Hein-Werner Customer Support for current pricing, 10939 N. Pomona Ave. Kansas City, MO 64153. Tel : (816)891-6390 E-mail: customerservices@heinwerner-automotive.com

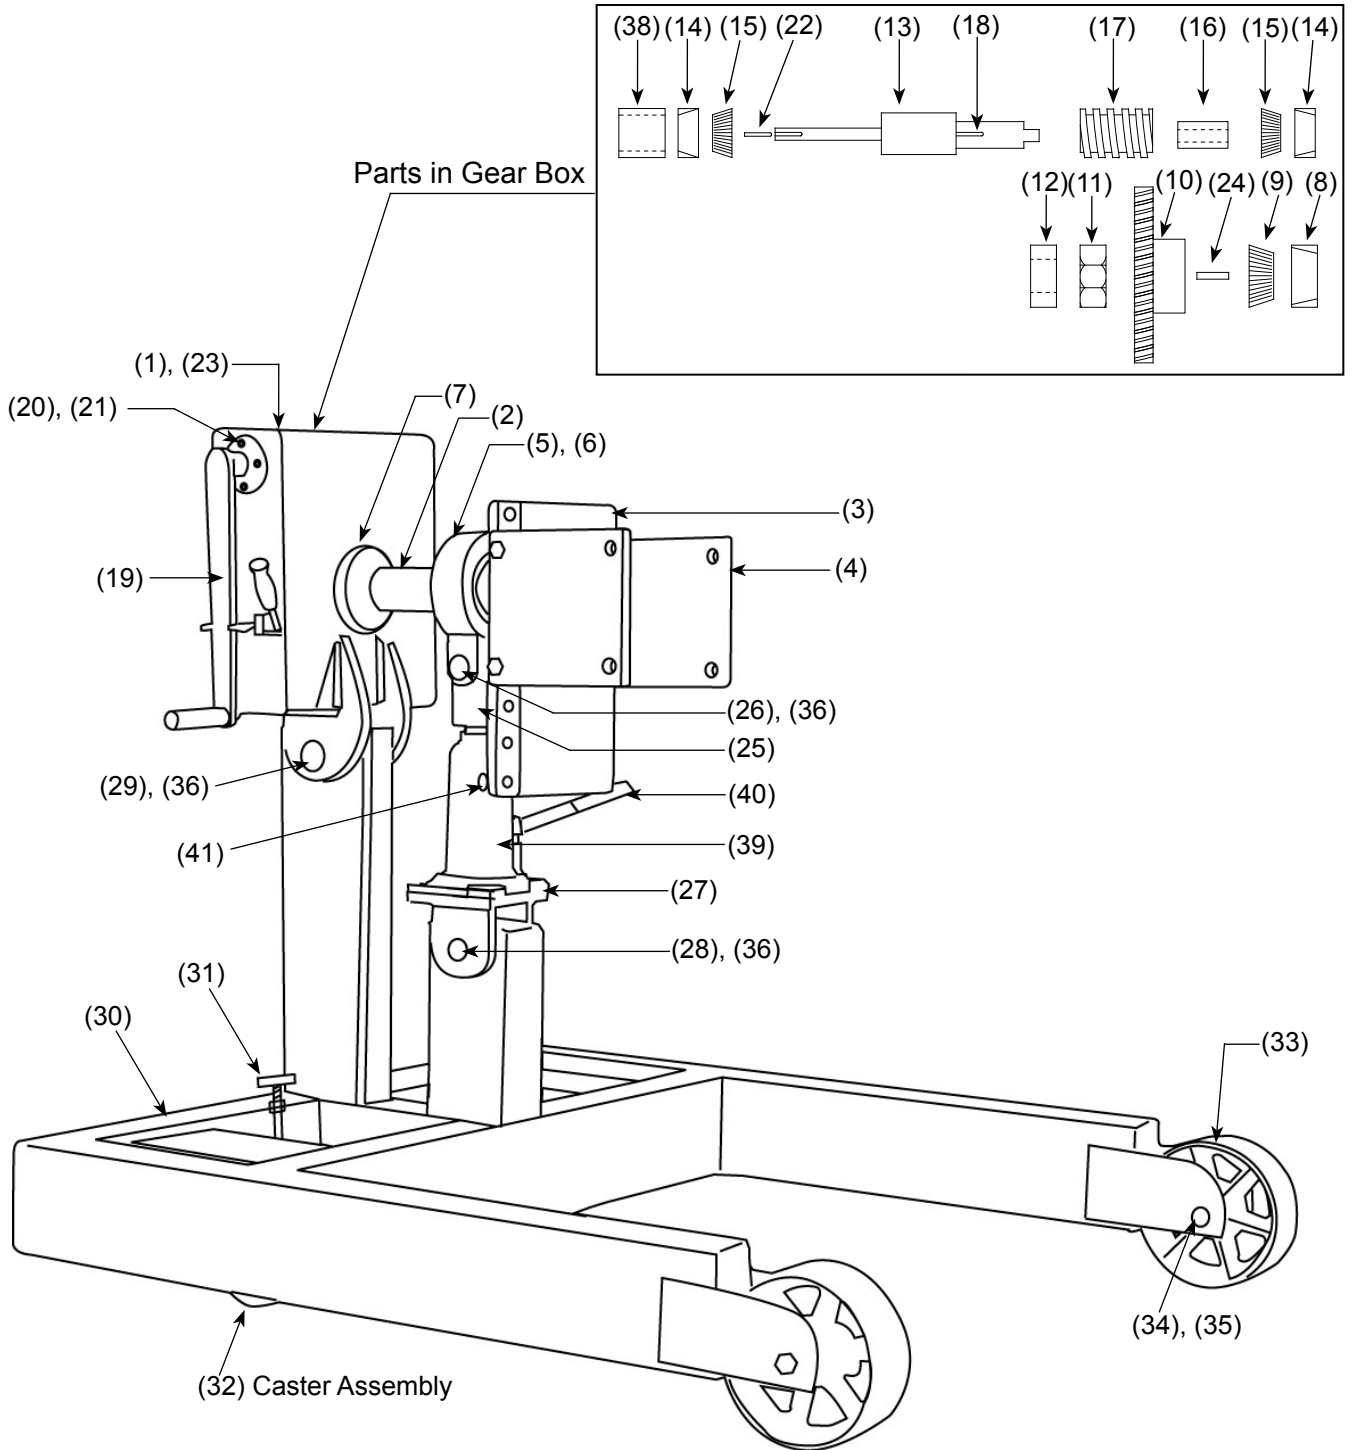


Figure 3 - Parts Illustration for HW93776 Engine Stand

**Optional Adapters:**

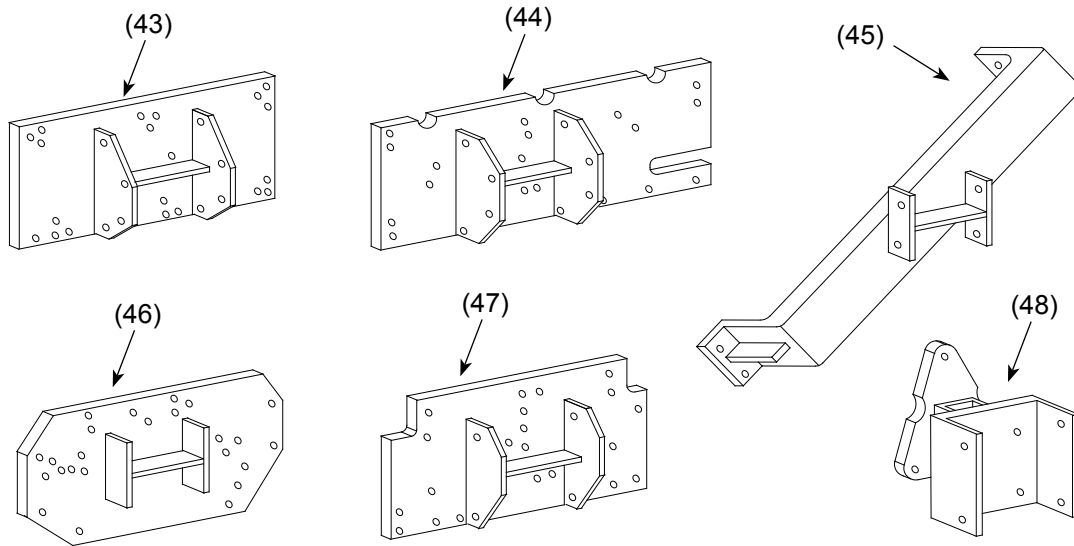


Figure 4 - Illustration for Optional Adapters

**Replacement Parts List for HW93776 Engine Stand**

| Item | Part#       | Description               | Qty |
|------|-------------|---------------------------|-----|
| 1    | 776-002-001 | Gear Box only             | 1   |
| 2    | 776-002-002 | Drive shaft               | 1   |
| 3    | 776-002-003 | Universal Adapter         | 1   |
| 4    | 776-002-004 | Side Plates               | 2   |
| 5    | 776-002-005 | Pillow Block Housing      | 1   |
| 6    | 776-002-006 | Pillow Block Bearing ER39 | 1   |
| 7    | 776-002-007 | Thrust Bearing D21        | 1   |
| 8    | 776-002-008 | Bearing Race 25520        | 1   |
| 9    | 776-002-009 | Tapered Bearing           | 1   |
| 10   | 776-002-010 | Worm Gear                 | 1   |
| 11   | 776-002-011 | Jam Nut                   | 1   |
| 12   | 776-002-012 | Ball Bearing 1654-2RS     | 1   |
| 13   | 776-002-013 | Worm Shaft                | 1   |
| 14   | 776-002-014 | Bearing Race 17520        | 2   |
| 15   | 776-002-015 | Tapered Bearing 17580     | 2   |
| 16   | 776-002-016 | Spacer                    | 1   |
| 17   | 776-002-017 | Worm                      | 1   |
| 18   | 776-002-018 | Key                       | 1   |
| 19   | 776-002-019 | Crank Handle              | 1   |
| 20   | 776-002-020 | Bearing Retainer          | 1   |
| 21   | 776-020-021 | Bearing Retainer Bolts    | 4   |
| 22   | 776-002-022 | Key                       | 1   |
| 23   | 776-002-023 | Gear Box Back Cover       | 1   |
| 24   | 776-002-024 | Worm Gear Key             | 1   |
| 25   | 776-002-025 | Jack Saddle Block         | 1   |

| Item   | Part#          | Description                    | Qty |
|--|----------------|--------------------------------|-----|
| 26   | 776-002-026    | Jack Saddle Block Pin          | 1   |
| 27   | 776-002-027    | Jack Bracket                   | 1   |
| 28   | 776-002-028    | Jack Bracket Pin               | 1   |
| 29   | 776-002-029    | Gear Box Pin                   | 1   |
| 30   | 776-002-030    | Base Assembly                  | 1   |
| 31   | 776-002-031    | Anchor Screw Assembly          | 1   |
| 32   | 776-002-032    | Caster Assembly                | 2   |
| 33   | 776-002-033    | 8" Steel Wheel Assembly        | 2   |
| 34   | 776-002-034    | Wheel Axle                     | 2   |
| 35   | 776-002-035    | Axle Retainer Ring             | 4   |
| 36   | 776-002-036    | Pin Retainer Ring              | 6   |
| 37   | 776-002-037    | Gear Box Cover Bolts           | 8   |
| 38   | 776-002-038    | Spacer                         | 1   |
| 39   | 10120          | Hyd. Jack, 12 Ton              | 1   |
| 40   | B10N-21000-000 | Jack Handle                    | 1   |
| 41   | F36100-0001    | Oil Filler Plug                | 1   |
| 42   | B12A0S-035     | Seal Kit for Hyd. Jack         | 1   |
| Optional Adapters: (not included in product) |                |                                |     |
| 43   | HW93776-1      | Cummins Engine                 | -   |
| 44   | HW93776-2      | Detroit Engine                 | -   |
| 45   | HW93776-3      | Mack Engine                    | -   |
| 46   | HW93776-4      | International Harvester Engine | -   |
| 47   | HW93776-5      | Caterpillar Engine             | -   |
| 48   | HW93776-6      | Allison Transmission           | -   |



## **TWO YEARS LIMITED WARRANTY**

For a period of two (2) years from date of purchase, SFA Companies will repair or replace, at its option, without charge, any of its products which fails due to a defect in material or workmanship under normal usage. This limited warranty is a consumer's exclusive remedy.

Performance of any obligation under this warranty may be obtained by returning the warranted product, freight prepaid, to SFA Companies Warranty Service Department, 10939 N. Pomona Ave., Kansas City, MO 64153. Except where such limitations and exclusions are specifically prohibited by applicable law:

- (1) THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS DESCRIBED ABOVE
- (2) SFA COMPANIES SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGE OR LOSS WHATSOEVER.
- (3) ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO TWO YEARS, OTHERWISE THE REPAIR, REPLACEMENT OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.
- (4) ANY MODIFICATION, ALTERATION, ABUSE, UNAUTHORIZED SERVICE OR ORNAMENTAL DESIGN VOIDS THIS WARRANTY AND IS NOT COVERED BY THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.